

| Item                           | Part No.                     | Schedule   | Qty. |
|--------------------------------|------------------------------|--|------|
| <b>Engine</b>                  |                              |  |      |
| Engine Oil Filter Cartridge    | 3661 0001 300 / ZK1641432430 | Replace it every 400 hours of usage (Initially replace it after 50 hours of usage) | 1    |
| Hoses (Radiator)               | 5116 0321 001                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0325 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0327 001                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0357 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| Hoses (Hydraulic Fan)          | 5116 6041 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6042 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6043 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| Air Cleaner Element (Outer)    | ZKR1404-42271                | Replace it every 1000 hours of usage or if there is any trouble.                   | 1    |
| Air Cleaner Element (Inner)    | ZKR2401-42281                | Replace it every 1000 hours of usage or if there is any trouble.                   | 1    |
| V-Belt (Fan)                   | ZK1G780-97011                | If there is any trouble.   | 1    |
| <b>Fuel System</b>             |                              |  |      |
| Fuel Filter Cartridge          | 3664 0221 500                | Replace it every 500 hours of usage.   | 1    |
| Hoses (Fuel)                   | 5116 0531 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0532 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0533 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0534 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 0538 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| <b>Cutting Rotor</b>           |                              |  |      |
| Cutter                         | 5116 4165 001                | Replace it if there is any trouble.  | 80   |
| Shackle                        | 5116 4166 000                | Replace it if there is any trouble.  | 40   |
| Bolt Set                       | 5116 9004 000                | Replace it if there is any trouble.  | 40   |
| V-Belt (Cutting Rotor)         | 5116 4169 000                | Replace it if there is any trouble.  | 3    |
| Rotor                          | 5116 4187 100                | Replace it if there is any trouble.  | 1    |
| <b>Hydraulic System</b>        |                              |  |      |
| Suction Filter (Cutting Rotor) | 5116 6453 000                | Replace it every 1000 hours of usage or if there is any trouble.                   | 1    |
| Suction Filter (Gear Pump)     | 5116 6454 000                | Replace it every 1000 hours of usage or if there is any trouble.                   | 1    |
| Return Filter Element          | 5116 6452 100                | Replace it every 500 hours of usage or if there is any trouble.                    | 1    |
| Hose (Oil Tank)                | 5116 6462 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| Hoses (Lift)                   | 5116 6223 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6231 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6251 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6252 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6253 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6254 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| Hoses (Rotor)                  | 5116 6343 000                | Replace it every 2 years of usage or if there is any trouble.                      | 2    |
|                                | 5116 6344 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6345 000                | Replace it every 2 years of usage or if there is any trouble.                      | 2    |
|                                | 5116 6346 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6347 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
|                                | 5116 6348 000                | Replace it every 2 years of usage or if there is any trouble.                      | 1    |
| <b>Drive Train</b>             |                              |  |      |
| Sprocket 15T                   | 3663 2106 000                | Replace it if there is any trouble.  | 2    |

|                        |               |   |   |
|------------------------|---------------|---|---|
| Roller                 | 5229 2201 000 | Replace it if there is any trouble.                           | 8 |
| Return Roller Assy     | 3640 2218 000 | Replace it if there is any trouble.                           | 2 |
| Idler Assy             | 3640 2331 000 | Replace it if there is any trouble.                           | 2 |
| Crawler                | 5116 2106 000 | Replace it if there is any trouble.                           | 2 |
| Hoses (Drive)          | 5116 6131 000 | Replace it every 2 years of usage or if there is any trouble. | 2 |
|                        | 5116 6132 000 | Replace it every 2 years of usage or if there is any trouble. | 2 |
|                        | 5116 6133 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6134 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6135 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6136 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6137 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6138 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6139 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6141 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6142 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6143 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
|                        | 5116 6144 000 | Replace it every 2 years of usage or if there is any trouble. | 1 |
| <b>Electric System</b> |               |   |   |
| Battery 100E41R        | 3661 0502 000 | Replace it if there is any trouble.                           | 1 |
| Fuse 10A (Red)         | 0980 1001 004 | Replace it if there is any trouble.                           | 5 |
| Fuse 15A (Blue)        | 0980 1001 504 | Replace it if there is any trouble.                           | 3 |
| Fuse 20A (Yellow)      | 0980 1002 003 | Replace it if there is any trouble.                           | 1 |
| Fuse 30A (Green)       | 0980 1003 003 | Replace it if there is any trouble.                           | 1 |
| Fuse 40A (Green)       | 0980 1004 003 | Replace it if there is any trouble.                           | 1 |
| Fuse 60A (Yellow)      | 0980 1006 005 | Replace it if there is any trouble.                           | 2 |