


## PARTSLIST

H S O 6 3 D BY1202用ウインチミッション

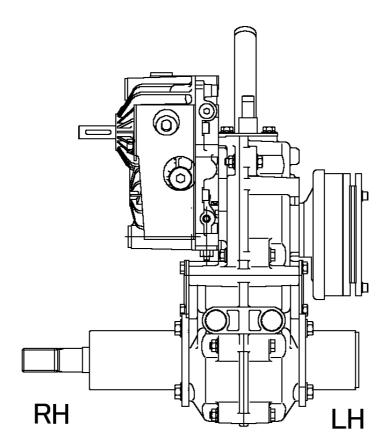



図示中RH LHは、車両進行方向に向かって右側をRH、左側をLHと表しています。

## 目 次


## CONTENS

7 3 1 8	1 1 0 C	ケースクミタテ CASE EQUIPMENT····································
7 3 1 8	1 2 0 A	HSTクミタテ HST EQUIPMENT····································
7 3 1 8	2 1 0 C	ドライブシャフトクミタテ DRIVE SHAFT EQUIPMENT ························3
7 3 1 8	2 3 0 C	セカンドシャフトクミタテ SECOND SHAFT EQUIPMENT ························4
7 3 1 8	2 2 0 D	バックシャフトクミタテ BACK SHAFT EQUIPMENT ······5
7 3 1 8	2 4 0 B	ダイ3ジククミタテ THIRD SHAFT EQUIPMENT・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
7 3 1 8	2 5 0 D	アクスルクミタテ AXLE EQUIPMENT·······7
7 3 1 8	3 2 0 D	チェンジヘッドクミタテ CHANGE HEAD EQUIPMENT・・・・・・・・・・・8
7 3 1 8	3 1 0 A	チェンジシフタークミタテ CHANGE SHIFTER EQUIPMENT ······ 9
7 3 1 8	4 3 0 A	ブレーキクミタテ BRAKE EQUIPMENT・・・・・・・・・・・・・・・・・・・・・・・10

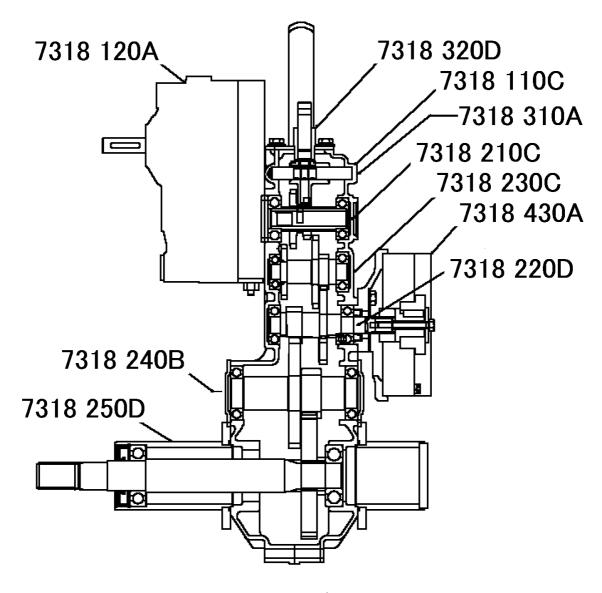


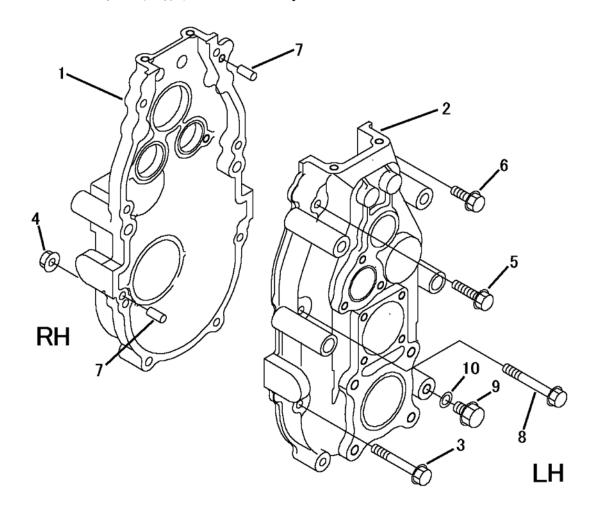


見出	部品番号	部品名称		個数	型寸	適 用 号 機	備考
NO.	PART NO.		PART NAME	Q'ty	DESCRIPTION	FROM ~ UP TO SERIAL NO.	REMARKS
1	7318 1106 000	ケース	CASE	1			
2	7318 1107 000	ケース	CASE	1			
3	K814 0108 070	Fホ゛ルト	BOLT	4	$M8 \times 70 (8T)$		
4	F301 0108 000		NUT	7	M8		
5	K814 0108 035	Fホ <sup>*</sup> ルト	BOLT	1	$M8 \times 35 (8T)$		
6	K710 0108 025		BOLT	1	$M8 \times 25 (7T)$		
7	0541 1108 018		PIN	2	$\phi$ 8×18		
8	K814 0108 075	Fホ゛ルト	BOLT	2	$M8 \times 75 (8T)$		
9	K712 0110 012	Fホ <sup>*</sup> ルト	BOLT	1	$M10 \times 12(7T)$		
10	0833 0001 000	シールワッシャ	WASHER	1	SW10		

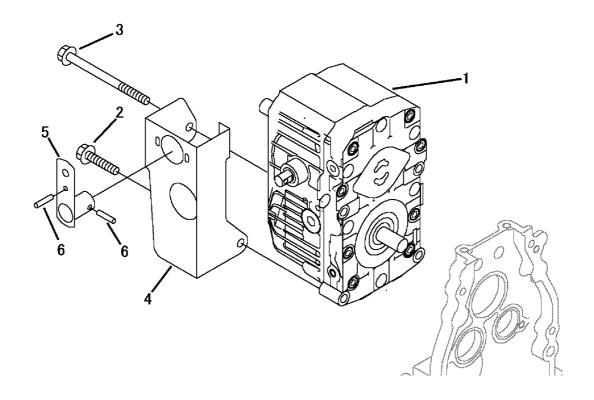

見出	部品番号	部品名称		個数	型寸	適 用 号 機	備考
NO.	PART NO.	A. A. A	PART NAME			FROM ~ UP TO SERIAL NO.	
1		ユアツトランスミッション	HST	1	BDU-10S-515		
2	K814 0108 040		BOLT	2	$M8 \times 40 (8T)$		
3	K814 0108 110		BOLT	2	M8 × 110(8T)		
4	7318 1203 000		PLATE	1			
5	7318 1204 000	リンク	LINK	1			
6	0550 0005 022	スプリングピン	PIN	2	5 × 22		

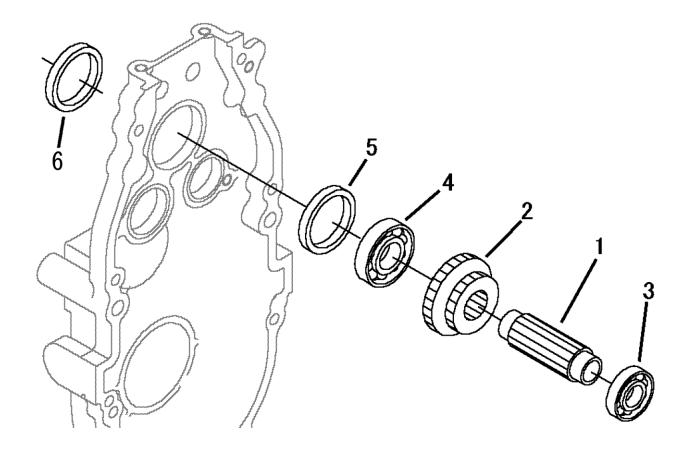


見出	部品番号	部品名称		個数	型寸	適用号機	備考
NO.	PART NO.	HIPHE HIT	PART NAME	Q'ty			
1	7318 2101 000	シャフト	SHAFT	1			
2	7318 2108 001		GEAR 18-28	1			
3	0750 0060 040		BEARING	1	6004		
4	0750 0062 040		BEARING	1	6204		
5	7318 2103 000		COLLAR	1			
6	0840 1015 357	オイルシール	SEAL	1			

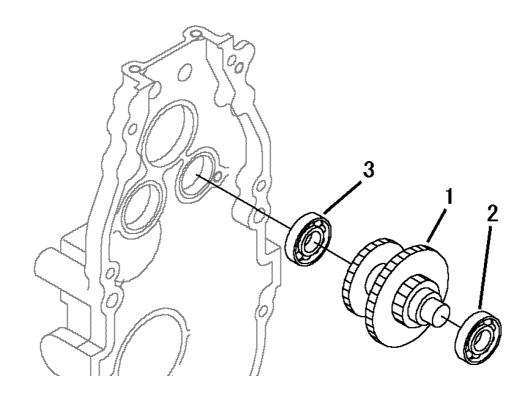

見出	部品番号	部品名称		個数	型寸	適	用号機	備考
NO.	PART NO.		PART NAME				UP TO SERIAL NO.	
1	7318 2306 001	シャフト	SHAFT	1				
2	0750 0062 030	ベアリング	BEARING	1	6203			
3	0750 0062 020	ペアリング	BEARING	1	6202			
-								
-								
-								


HS063D - 4 - 04/07/09

## 7318 220D バックシャフトクミタテ BACK SHAFT EQUIPMENT

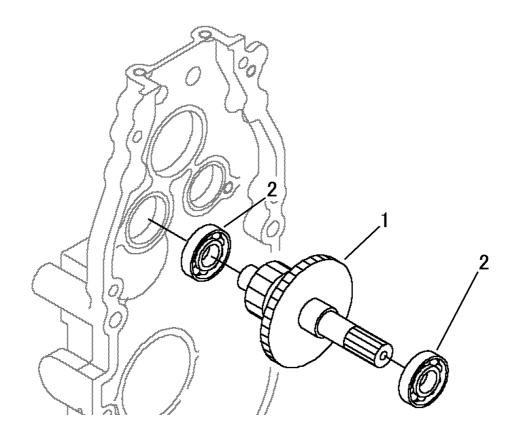


見出	部品番号	部品名称		個数	型寸	谪	用号機		備	考
NO.	PART NO.	пенн m 13.	PART NAME		DESCRIPTION			NO.		
1	7318 2208 000	シャフト	SHAFT	1	DECOR. HOR		<u> </u>		1 (2.00)	
2	0750 0062 030	ヘ・アリンク・	BEARING		6203					
										_


HS063D - 5 - 04/07/09

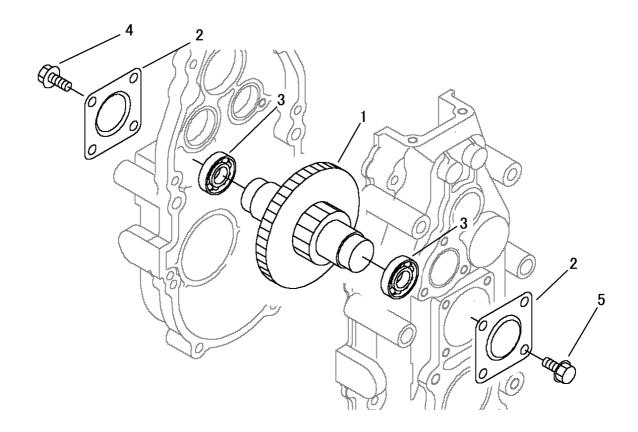


		40-5-21	ī	/ N//	I	W	
見出	部品番号	部品名称		個数		適 用 号 機	備考
NO.	PART NO.		PART NAME	Q'ty	DESCRIPTION	FROM ~ UP TO SERIAL NO.	REMARKS
1	7318 2406 000	‡ <sup>†</sup> †14-43	GEAR 14-43	1			
2	7318 2409 000	プレート	PLATE	2			
3	0750 0060 060	ペアリンク゚	BEARING	2	6006		
4	K710 0608 016	Fホ <sup>°</sup> ルト	BOLT	4	M8 × 16 (7T)		
5	K710 0108 016		BOLT	4	M8 × 16 (7T)		
					,		

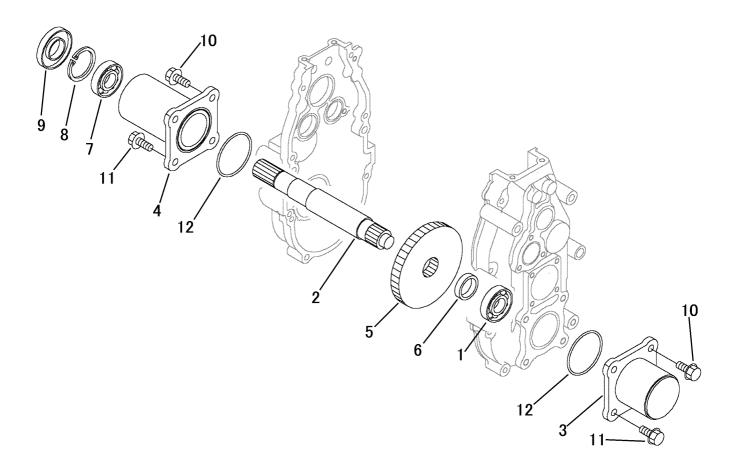


見出	部品番号	部品名称		個数	型寸	適用号機	備考
NO.	PART NO.	пьни н 13.	PART NAME			FROM ~ UP TO SERIAL NO.	
1	0750 0063 050	ペアリング	BEARING	1	6305		
2	7318 2528 001		SHAFT	1			
3	7318 2531 001		PIPE	1			
4	7318 2529 001		PIPE	1			
5	7318 2503 000	‡ <sup>'</sup> †41	GEAR	1			
6	7318 2536 000		PIPE	1			
7	0750 0062 060	ペアリンク゚	BEARING	1	6206		
8	0741 0006 200	Cリング	RING,SNAP	2	H62		
9	0840 1306 210	オイルシール	SEAL	1	UE 30 × 62 × 10	)	
10	K710 0610 025	Fホ <sup>°</sup> ルト	BOLT	4	M10 × 25 (7T)		
11	K710 0110 025		BOLT	4	M10 × 25 (7T)		
12	0830 0500 670	Oリング <sup>゛</sup>	O-RING	2	S-67		

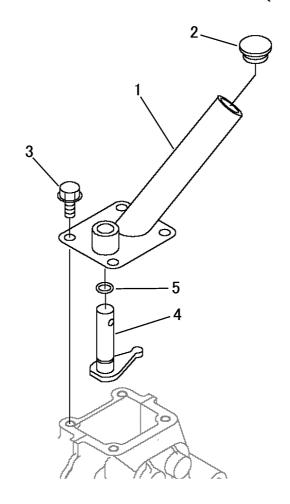

	***	100 60	I	/ N//	I: 1	·	, 44. A.
見出	部品番号	部品名称		個数		適 用 号 機	備考
NO.	PART NO.		PART NAME	Q'ty	DESCRIPTION	FROM ~ UP TO SERIAL NO.	REMARKS
1	7318 3206 001	<b>カ</b> 八˙ –	COVER	1			
2	7410 1004 000	チュウユセン	CAP	1	PS1/2 Oリングツ	‡	
3	K710 0608 016	F#, NP	BOLT	4	$M8 \times 16(7T)$		
4	7308 3205 000		ARM	1			
5	0830 0500 120	Oリンク <sup>'</sup>	O-RING	1	S12(1種A)		
			<u> </u>				

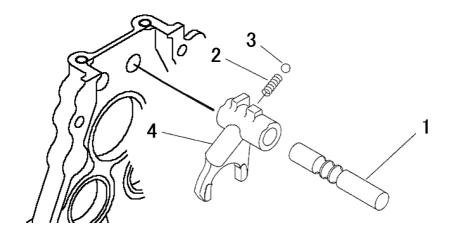

見出	部品番号	部品名称		個数	型寸	適	用号	機	備	考
NO.	PART NO.		PART NAME	Q'ty	DESCRIPTION	FROM ~	UP TO SE	RIAL NO.	REMAR	≀KS
1	7318 3101 000		SHAFT	1						
2	7305 3008 000	スプリング	SPRING	1	#130					
3	0800 0000 800	<b>ホ</b> ゚−ル	BALL	1						
4	7318 3102 000	フォーク	FORK	1						
	_									

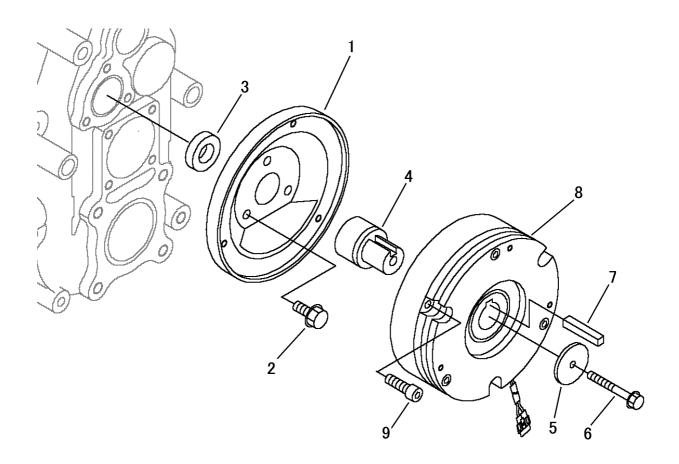

見出	部品番号	部品名称		個数	型寸	適用号機	備考
NO.	PART NO.	прин тала	PART NAME			FROM ~ UP TO SERIAL NO.	
1	7318 4301 001	プレーキトリツケ	BRACKET	1			
2	K710 0108 025		BOLT	4	M8 × 25(7T)		
3	0840 1017 328	オイルシール	SEAL	1	UE17 × 32 × 8		
4	7318 4321 000	インナーショイント	JOINT	1			
5	7306 4325 000	ワッシャ	WASHER	1			
6	K814 0106 050		BOLT	1	$M6 \times 50(8T)$		
7	0571 0007 025	‡-	KEY	1	7 × 40		
8	7318 4305 001	<b>デンジプレーキ</b>	BRAKE	1			
9	A544 0706 040	キャップ、スクリュー	BOLT	3	M6 × 40		