

見出	部品番号	部品名称		個数	型寸	適用号機	備考
NO.	PART NO.		PART NAME			FROM ~ UP TO SERIAL NO.	
1	7318 2306 001		SHAFT	1			
2	0750 0062 030	ペアリング	BEARING	1	6203		
3	0750 0062 020	ヘ・アリンク・	BEARING	1	6202		

HS063D - 4 - 04/07/09