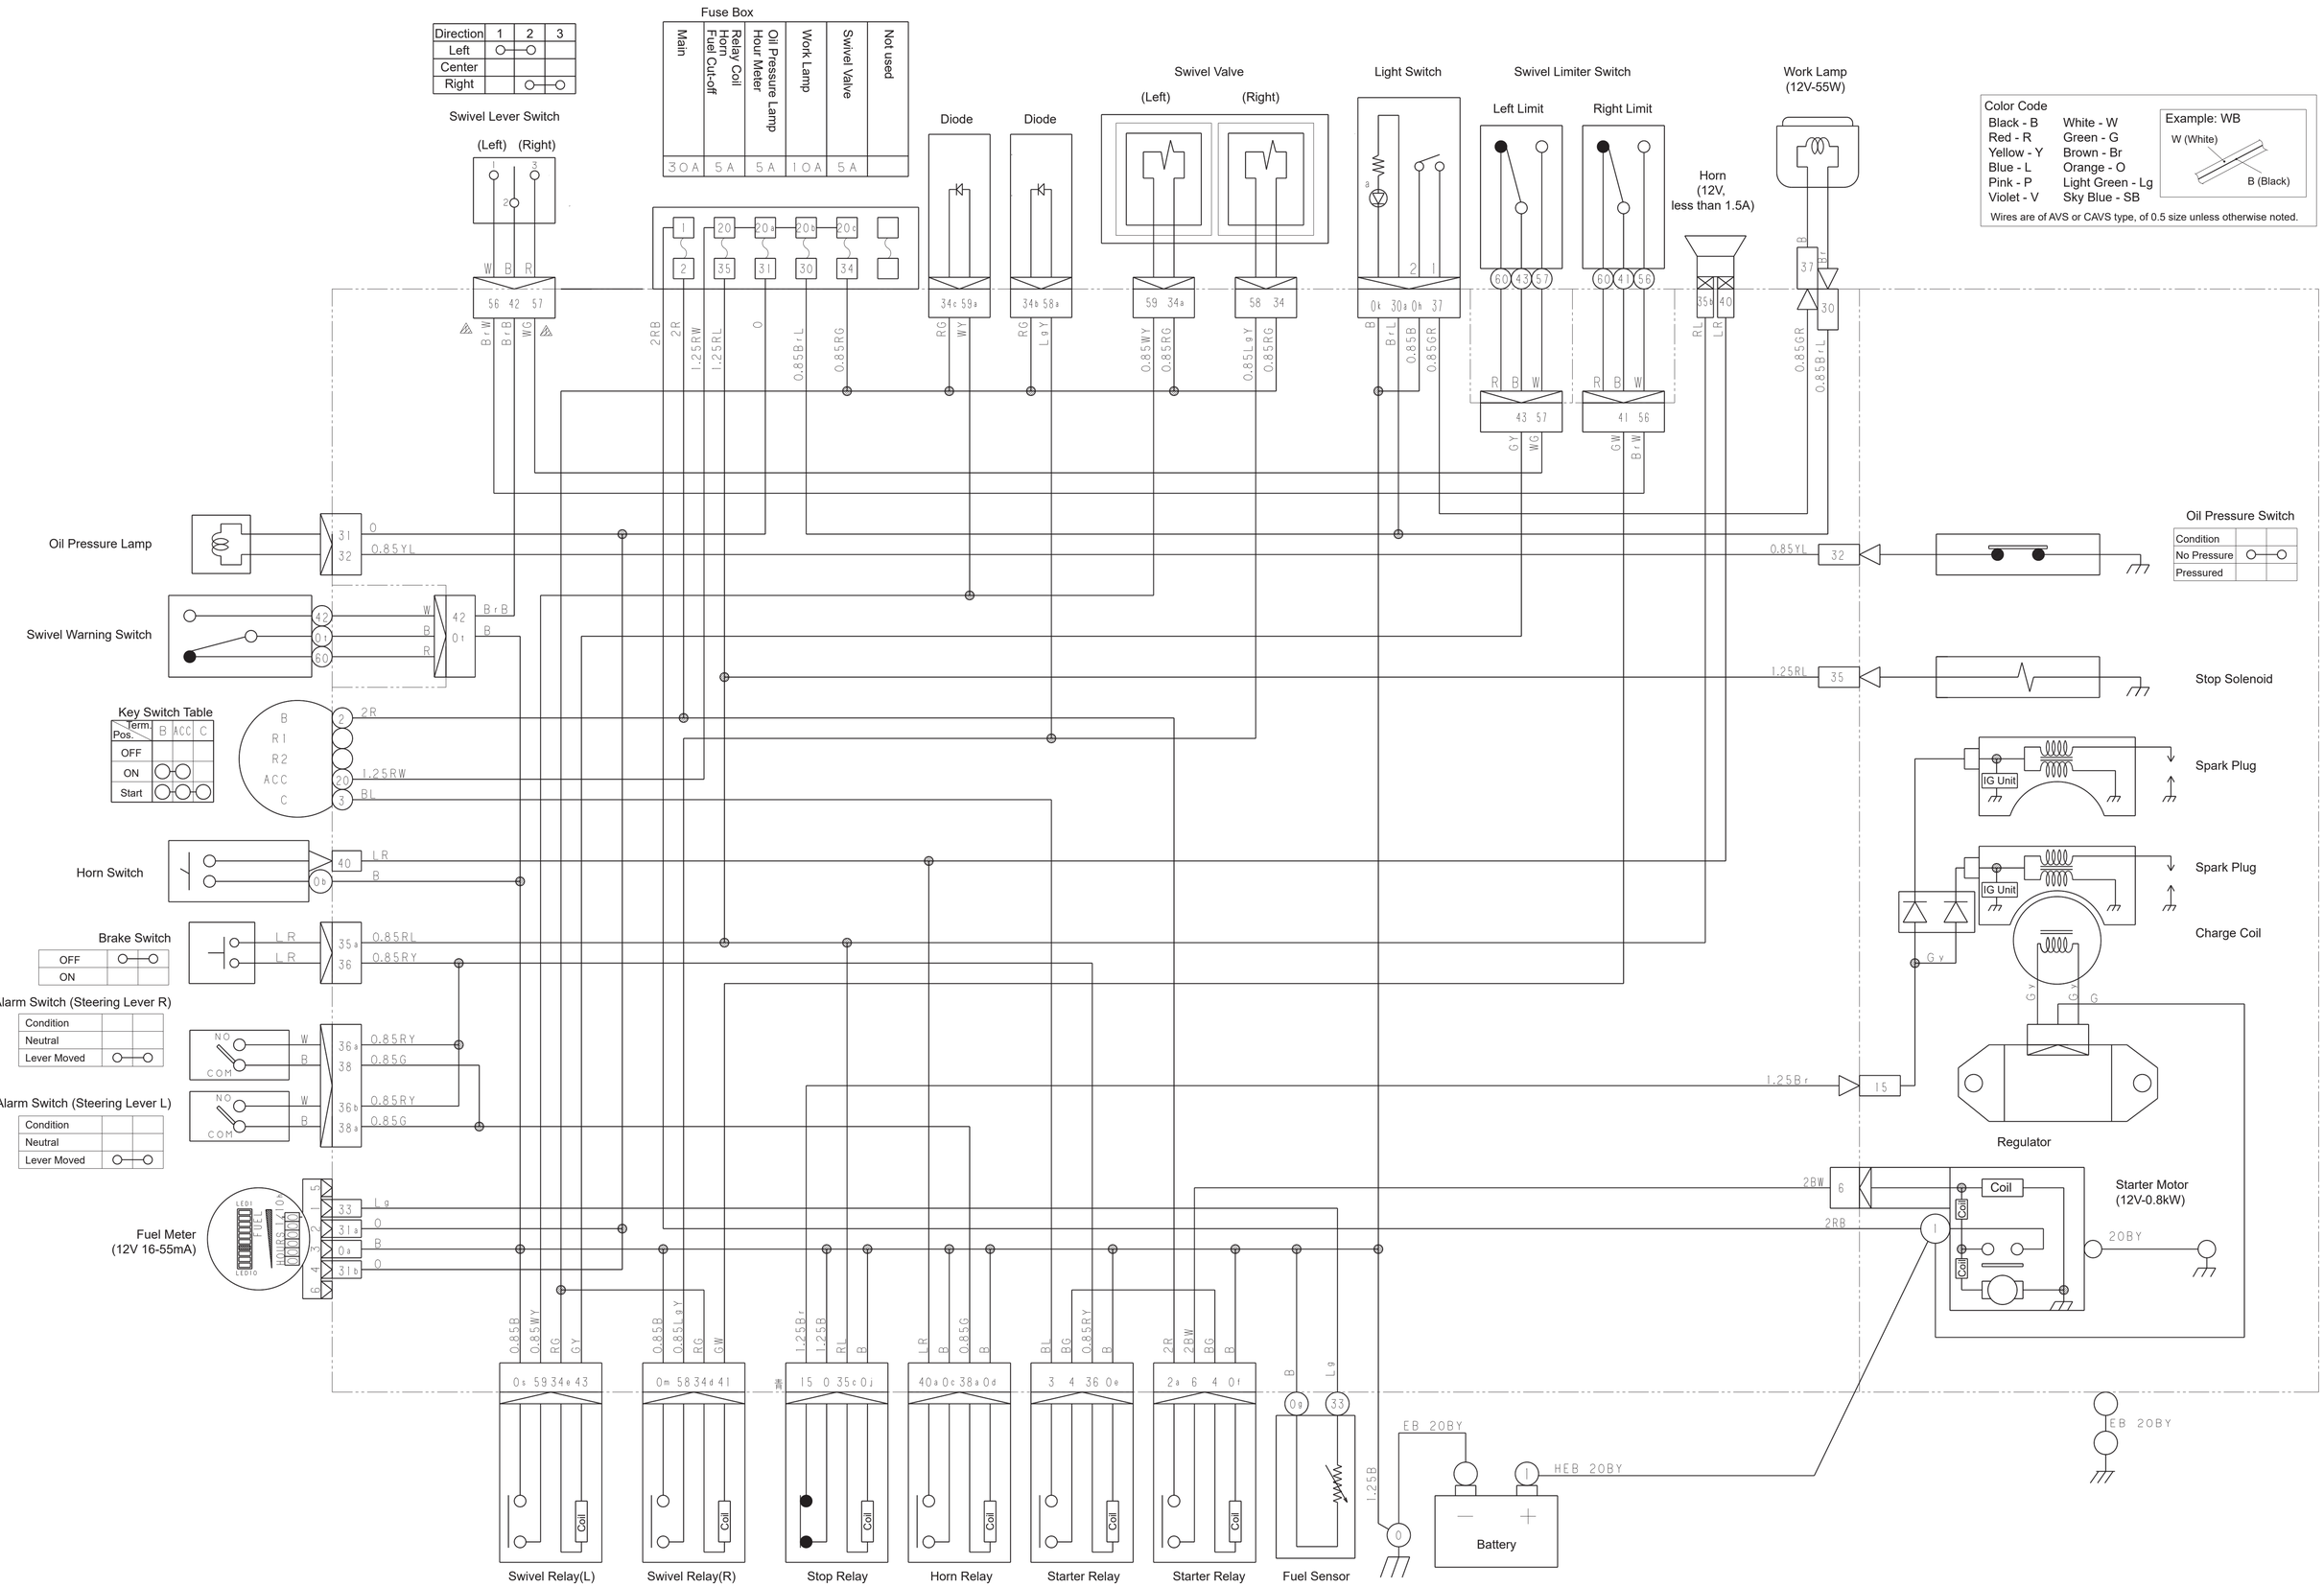
Direction 1 2 3
Left
Center
Right
Swivel Lever Switch
(Left) (Right)
Fuse Box
Main
Horn Fuel Cut-off Relay Coil
Oil Pressure Lamp Hour Meter
Work Lamp
Swivel Valve
Not used
30A 5A 5A 10A 5A
Diode
Diode
Swivel Valve
(Left) (Right)
Light Switch
Swivel Limiter Switch
Left Limit
Right Limit
Horn
(12V,
less than 1.5A)
Work Lamp
(12V-55W)
Color Code
Black - B
Red - R
Yellow - Y
Blue - L
Pink - P
Violet - V
White - W
Green - G
Brown - Br
Orange - O
Light Green - Lg
Sky Blue - SB
Example: WB
W (White)
B (Black)
Wires are of AVS or CAVS type, of 0.5 size unless otherwise noted.
Oil Pressure Lamp
Oil Pressure Switch
Condition
No Pressure
Pressured
Swivel Warning Switch
Stop Solenoid
Key Switch Table
Term.
Pos.
B ACC C
OFF
ON
Start
Spark Plug
IG Unit
Charge Coil
Horn Switch
Brake Switch
OFF
ON
Alarm Switch (Steering Lever R)
Condition
Neutral
Lever Moved
Alarm Switch (Steering Lever L)
Condition
Neutral
Lever Moved
Regulator
Fuel Meter
(12V 16-55mA)
Starter Motor
(12V-0.8kW)
Coil
Swivel Relay(L)
Swivel Relay(R)
Stop Relay
Horn Relay
Starter Relay
Starter Relay
Fuel Sensor
Battery
EB 20BY
HEB 20BY