Maintenance check sheet & spare parts order sheet

CMX2502HRCAU CMX227HRCAU CM226HRCAU CMX186HRCAU CM185HRCAU

Pease use this check sheet for a better maintenance of your ride on brush cutter.
If you need spare parts or any technical assistance, please contact your local dealer.

End user name: Model:

Address: Serial No:

TEL: Dealer Name:

FAX: Sales Rep:

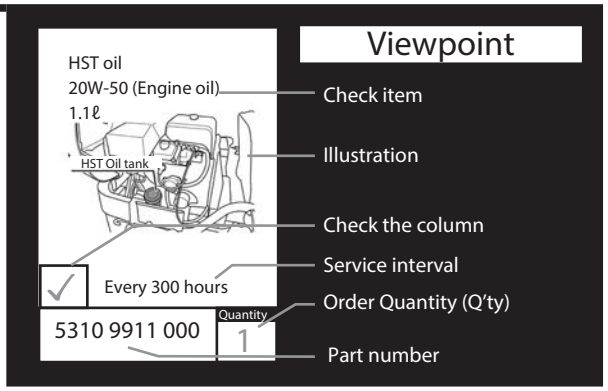

■ Did you notice any oil leakage? Is the oil dirty?

(Check the hour meter to fill the time)

Engine oil
10W-30 1.4ℓ

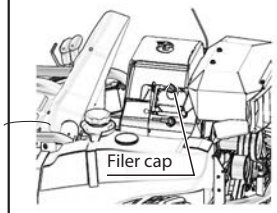

1st 20 hours
After every 50 hours

Previous	H
Next	H

Transmission oil
Gear oil (#80) 0.9ℓ

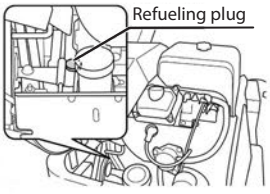

1st 50 hours
After every 500 hours

Previous	H
Next	H

Front axle oil
Gear oil (#80)0.7ℓ

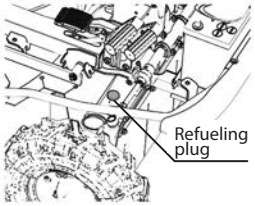

1st 50 hours
After every 500 hours

Previous	H
Next	H

Gear box oil
Gear oil (#80) 0.15ℓ

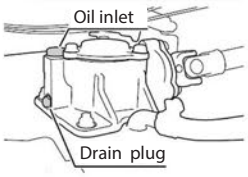

1st 50 hours
After every 500 hours

Previous	H
Next	H

HST oil
20W-50 (Engine oil)
1.1ℓ

※ Standard

After every 300 hours

	order Q'ty
5310 9911 000	

■ Are the filters dirty?

Engine oil filter

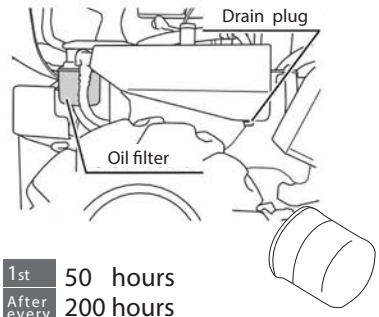

1st 50 hours
After every 200 hours

	order Q'ty
ZR 248 65801 00 (PC)	

Fuel filter

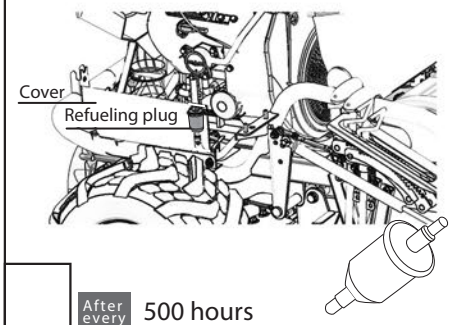

After every 500 hours

	order Q'ty
ZR 263 65012 A3 (PC)	

Air cleaner element

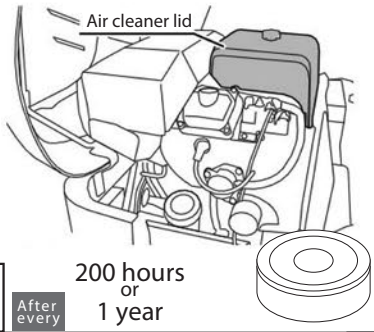

After every 200 hours or 1 year

	order Q'ty
ZR 263 32610 A1 (PC)	

■ Is the blade edge reduced? Is the blade worn? Check the blade wear limit.

Cutting blade set (IAI)

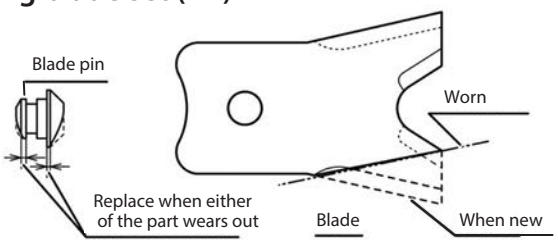

Visually inspect blades and pin for wear and damage. If blades are worn normally, turn them over and use. Replace if both edges are worn. If blades or pin are worn excessively, deformed, damaged, or missing, replace them with new ones.

	order Q'ty
Z 332 4202 010 (This is for one blade)	

Stay bar

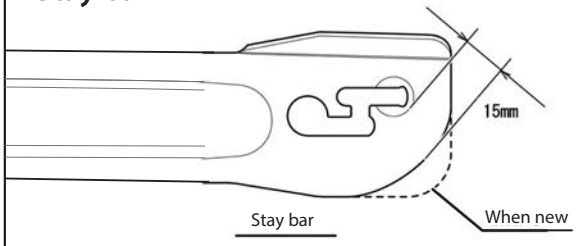

Wear Limit: Up to the solid line in the left figure (should have more than 15mm clearance between edge of rotor stay and mounting slot.)

	order Q'ty
5332 4201 0 00 (This concern only the stay bar)	

■ Did you notice any damage, cracks or uneven wear on the travel devices?

Rear brake

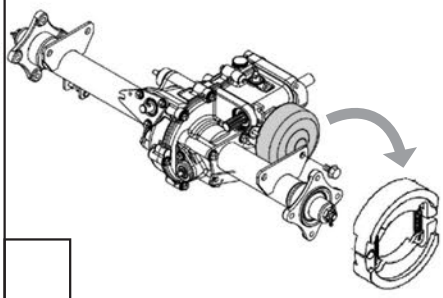

	order Q'ty
7301 9901 000 (1 shoe -set)	

Front brake

For 4WD

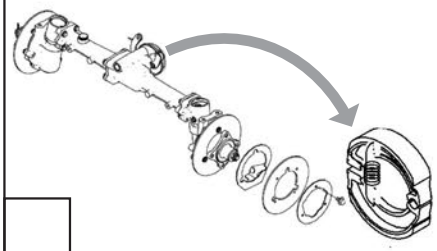

	order Q'ty
7306 9901 000 (1 shoe -set)	

Cutting brake

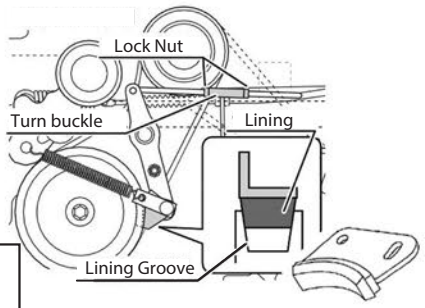

	order Q'ty
5310 4301 001 (1 item)	

Tire

Models CMX227HRCAU CM226H CMX2502HRCAU

4.00-7-4PR

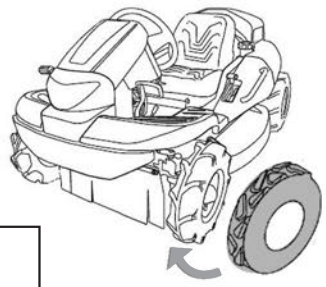

		order Q'ty
Front	5347 2202 000 Only tire (2 tires for 1 machine)	

17×8.00-8-4PR

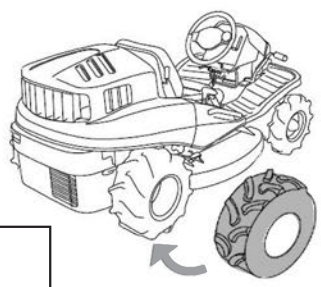

		order Q'ty
Rear	5347 2302 000 Only tire (2 tires for 1 machine)	

Tube(4.00-7)

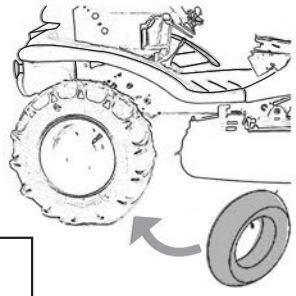

		order Q'ty
Front	5304 2205 000 (2 tubes for 1 machine)	

Tube(17*8.00-8)

※Option

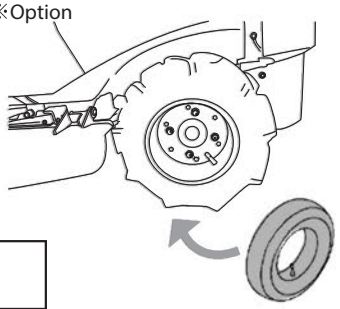

		order Q'ty
Rear	3407 6004 000 (2 tubes for 1 machine)	

Tire

Models CMX186H CM186H

3.50-7 2PR

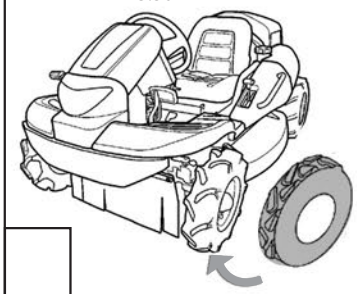

		order Q'ty
Front	5304 2204 000 Only tire (2 tires for 1 machine)	

16*7.00-8 2PR

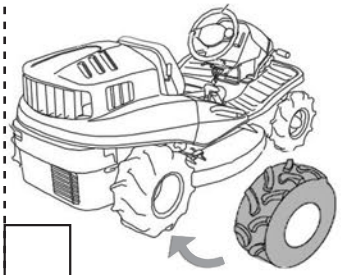

		order Q'ty
Rear	5304 2301 100 Only tire (2 tires for 1 machine)	

■ Are belts in good condition?

V-Belt (travel)

SB36 (LB36)

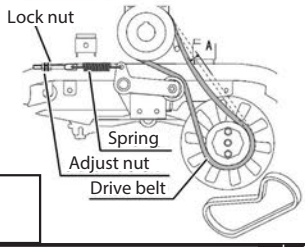

	order Q'ty
0852 1300 036 (1 belt for 1 machine)	

V belt (blade)

SB37 (LB37)
Super gold

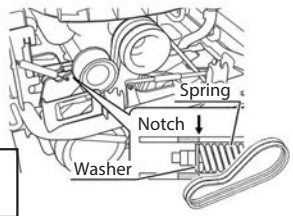

	order Q'ty
0852 1600 037 (2 belts for 1 machine)	

■ Other suggestions

Parts name	check	Parts number	order Q'ty
Cooling fan		5335 2023 000	
HST reserve tank		5313 2015 000	
Battery		Please ask your dealer.	
Start relay (black)		3714 0491 000	
Stop relay (blue)		3714 8075 000	

Note:
These items are consumable spare parts and their life span will depend on the conditions of utilization of the machine.
Specifications might be subject to change without notice.

CANYCOM

For parts order please contact your local dealer. Thank you!

For more information regarding our spare parts, please access to our website
www.canycom.jp/eng/maintenance/parts/